



www.nausicaa-medical.com

This device is intended lifts and ceiling-mounted lifts for transferring a person to a sitting position.

It is compatible with lifts equipped with a smooth, open or closed hook system, being able to receive a 40 mm wide sling without impacting the strength of the sling on beams ranging from 2 to 4 points, which excludes hooking with a metal plate with holes.

BACKREST SLING



- CE certified and manufactured in France, the Backrest Sling is recommended for bed to chair to bed transfers and for "lifting from the floor" transfers in a lying position for specific pathologies.
- Its U-shape associated with the net portion beneath the buttocks make the installation and removal comfortable for the patient and accommodating for the caregiver.
- Its back part associated with the headrest in rigid foam and the full stiffener allow to protect the spine during transfers.



Before each use, it is important to check: the presence of the label, the stitching of the straps, that they do not fray or come undone, that the device has no tears, snags, holes or signs of fraying (fabric and attachment straps), that the buckles are not cracked or have weak attachments.



The use of the device requires the presence and vigilance of a third person. When used by an agitated or disoriented person, monitoring becomes imperative. This medical device must be implemented or trained by a health professional.



SGLDOS-PF

v 05.02/23

Important Recommendations :

- In order to get a maximum efficiency of these sort of product, it is necessary :
- to choose the appropriate size for the patient
- to get the best possible adjustment to the patient
- These products must not be in direct contact with a wounded skin.




BACKREST SLING

SIZES & DIMENSIONS (in cm)

	A	B	C
S	59	88	75
M	66	92	83
L	71	96	92
XL	77	101	102

Composition
100% Polyester fabric
High tenacity 100% polyester net
100 % Polyester strap
50kg/m³ PE foam – 100kg/m³ PE foam
20mm Polyester bias
Aluminium stiffener 15x3mm

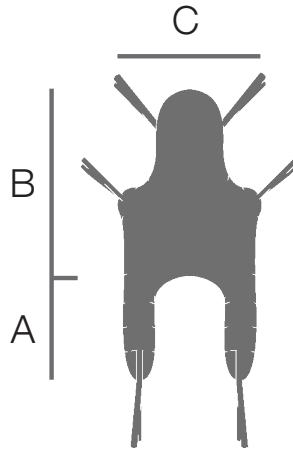

The widest part of the sling constitutes the back of this type of sling. The branches of the U constitute the thigh support.

This sling has a 6 points hanging system to the spreader bar :

- 2 on both sides of the top of the back
- 2 on both sides of the back
- 1 at each end of the thigh support.

Position the lower part of the back at the coccyx so that the loops of the hanging straps are on both sides of the patient. Slightly raise the right leg of the patient, pass the right thigh support under the right thigh. Do the same for the left leg. Both hanging straps are positioned between the legs of the patient. Do not cross the hanging straps. Hang both hanging straps located at the top of the back and the ones located on the back as well as the hanging straps of the thigh supports to the spreader bar.

ADJUSTMENTS :

The multiple hanging straps allow various sitting positions.

CAUTION

Read the instructions for use before using the sling.

Hang to the spreader bar the loop which are at the same level.

Do not change any adjustment while the patient is hanging in the sling.

Before lifting a patient, ensure that the sling is correctly hooked on the spreader bar.